


## Hood Scoop install

because the 5VZ or some other engine swaps require extra height or cooling , we "opt" for a hood scoop instead of a body lift . So we custom built one .

here's how we install it ..

First the scoop has the studs imbedded , so a template is necessary .. a sheet of "art" paper from your local office supply store will suffice .. "poke" the studs threw the paper , outline the scoop , and cut the template out .

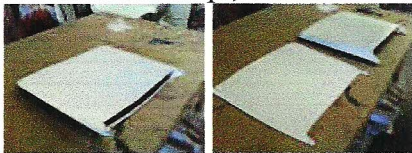

Be sure to mark it .. so you know which end is up



now with your "template" .. you can measure , and mark your install

there are a few different positions you can set this at , so .. this one is where we want it ..

With that in mind .. time to drill

Take your time on this .. the metal hood skin is thin , and will dent really easily .



depending on your "scoop" location .. you will have to "open" up holes on the structural



braces underneath and to open it up for a "functional vent" .. we suggest cutting between the supports

